

## **Filling the tank**

To fill the fluid tank:

1. Verify that the fog machine is turned off.
2. Remove the filler cap.
3. Use a funnel to fill the tank up to the fill line with fog fluid that is approved for this product. Pour in less fluid if the machine is installed at an angle: to prevent leaks, fluid must not be above the filler opening.
4. Replace the filler cap and verify that the feed hose touches the bottom of the tank.
5. Wipe up any spills or drips.

## **Making fog**

1. Fill the fluid tank as described above.
2. Connect a remote control or wireless remote control receiver as described on the previous page.
3. Connect the fog machine to AC power and switch it on. Allow the machine to heat up for several minutes. The machine is ready to use when the green LED lights up on the wired remote control or the wireless remote receiver.
4. Verify that it is safe to fire the machine. Press the button on the remote control until fog is released. (Once the system has been primed, fog will be released instantly.)
5. Monitor fluid level and refill as necessary (after turning off the machine). The "No Liquid" rear panel LED illuminates when fluid is exhausted and the pump is automatically disabled.
6. When finished, turn off the machine and allow it to cool before handling. The nozzle remains hot for three hours.